



MOBILE ENHANCEMENT

SAMSUNG

Bluetooth® Stereo Headset

SBH170

MOBILE ENHANCEMENT



English.....	1
中文.....	23

Contents

Getting started

Checking the accessories	3
Your headset overview	3
Button functions	4
Charging the battery	6
Putting on the headset	7

Before using your headset

Turning the headset on or off	8
Pairing the headset with a compatible phone	9
Connecting the paired headset to your phone	10

Using your headset

Using call functions	11
Using music control functions	13
Answering a call while listening to music	14

Care and maintenance

Storing the headset	15
Frequently asked questions	16
Warranty and parts replacement	18
Correct disposal of this product	19
Glossary	19
Specifications	21



Thank you

Thank you for purchasing the SBH170, Samsung Stereo Bluetooth Headset. We hope you will be satisfied with your new headset. Please read the instruction manual to get started and to make the best use of the headset's features.



Drive safely

Using a mobile phone while driving creates a distraction to the driver which may increase the likelihood of an accident.

When using the phone while driving, keep conversations short and do not make notes or read documents. Before answering calls consider your circumstances. Pull off the road and park before making or answering calls when driving conditions require (e.g. bad weather, high traffic density, presence of children in the car, difficult junctions or manoeuvres.)

Remember, driving comes first, not the call!

Abide by local laws.



Check phone compatibility

The SBH170 is compatible with most Bluetooth¹ (see Glossary) phones that are compliant with Bluetooth version 1.1 or higher and support Advanced Audio Distribution profile, Audio Video Remote Control profile, Headset profile, and Hands-free profile². Ensure that your phone has Bluetooth capability by visiting your phone manufacturer's website.

Getting started

This section explains what to remember for the proper use of your Bluetooth headset.

 


Checking the accessories

Make sure you have the following items with your headset: Carrying case, Travel Adapter, User's Guide.



Your headset overview

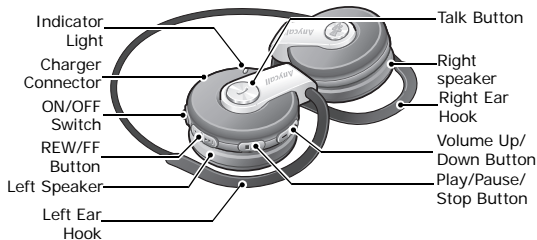

The items supplied with your headset and the accessories at your Samsung dealer may vary, depending on you country or service provider .



Button functions



Talk button

In Standby mode

- Press to activate voice dialling.
Available only when your headset and phone are connected using the Hands-free Bluetooth profile and your phone supports this function.
- Press and hold to redial the last dialled number.
For some phones, pressing and holding this button opens the call log list. Press and hold it again to redial the last number.

When a call comes in

- Press to answer the call.
- Press and hold to reject the call.

During a call

- Press and hold to place the call on hold or retrieve the held call.
- Press and hold to answer a second call.
- Press and hold to switch between the active call and held the call.
- Press to end the call.

In Connectable mode

- Press to connect the headset to the phone, if they have been paired, via the Handsfree or Headset profile.

Play/Pause/Stop button

In Standby mode

- Press to launch the music player.


When the music player is launched

- Press to begin playing music.
- Press to pause or resume playback.
- Press and hold to stop playback.
- Press again to play from the start of the track.

In Connectable mode

- Press to connect the headset to the phone, if they have been paired, via the A/V Remote Control profile.

Volume Up/Down button

- Press to adjust the speaker volume during playback.
- Press to adjust the earpiece volume during a call.
- Press to scroll through call logs, if you accessed the call log list by pressing and holding .

REW/FF button

- Press to move to the previous or next track during music playback.
- Press and hold to rewind or fast forward during music playback.



Charging the battery

This headset has a rechargeable internal battery which is non-removable. Please make sure that you fully charge the battery before using the headset for the first time.



- 1 Plug the charger into the headset's charger connector.
- 2 Plug the charger into the electrical outlet.

The red indicator light turns on. When the battery is fully charged, the indicator light changes to blue.



- Disconnect the charger from the power source or the headset after charging is completed.
- Use only a Samsung-approved charger. Unauthorised chargers may cause an explosion or damage on the headset.
- Always try to keep the headset at room temperature (0 ~ +40^o C).
- The battery will gradually wear out if charging/ discharging are repeated because it is a consumable part.
- The headset is not able to operate while charging. Try connecting again after charging is completed.

About the charging

Battery charging and standard operation time

 
Battery operation time	Charging time	Standard operation time		
		Talk time	Standby time	Play time
		Up to 8 hr	Up to 160 hr	Up to 8 hr

When the battery charge falls low

A warning sound beeps and the red indicator light flashes. If you are on a call, switch the call from the headset to the phone before the headset automatically turns off.



Putting on the headset

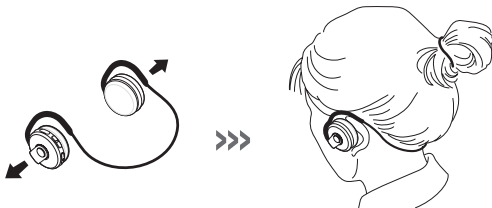 




- 1 Hold the headset, as shown, and place it on your ear. Be sure to put the correct (Left, Right) earpiece on each ear.
- 2 Grip the main part of the headset and adjust it to the back of the ear for the maximum comfort and fit.

Before using your headset

This section explains basic operations and set-ups of your Bluetooth headset.

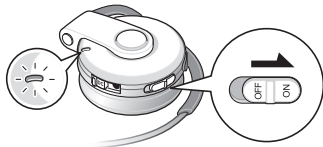Turning the headset on or off



- Push the ON/OFF switch  to turn the headset on.
When the headset is ready to be paired, the blue indicator light turns on.
- Push the ON/OFF switch  to turn the headset off.




Pairing the headset with a compatible phone

Pairing³ will create a unique and encrypted wireless link between two Bluetooth enabled devices, such as a Bluetooth phone and a Bluetooth headset. To use the headset with other Bluetooth devices, both devices must be paired. When trying to pair the two devices, keep the headset and the phone reasonably close together.

- 1 Get your headset ready to be paired.

There are 2 cases for being ready to be paired:

- When turning on the headset for the first time.
- When turning on the headset with pressing and holding . After the indicator sequentially flashes blue, red, and purple twice, it will turn to blue.

- 2 Search for the headset on your phone according to the phone user's guide.

Your phone will find "Samsung SBH170."

- 3 Select **Samsung SBH170**.

- 4 When the phone asks if you want to pair with it, confirm by selecting **Yes** or **OK**.

- 5 Enter the headset **passkey or PIN**,⁴ "0000 (4 zeros)".




Connecting the paired headset to your phone

If two Bluetooth devices are disconnected by a power failure, you need to reconnect them. When you reconnect a paired headset, you are not asked for its passkey.

- 1 Be sure that the headset is turned on.

The headset may be connected to your phone automatically when the pairing is completed depending on the types of the phone.

- 2 Choose the connection method you want.

- To connect from the phone, follow the phone user's guide.
- To connect from the headset, your phone and the headset have had to be connected more than once. Press .

- 3 When the two devices are connected successfully, you can make or answer a call on the headset.

Using your headset

This section explains how to use various functions, such as making or answering a call, using menus that you can use while a call is in progress, and listening to music.


- ! Activated functions may differ depending on the types of the phone. Please make sure that your phone supports all the features that your headset provides before starting to use.


 



Using call functions


Making a call

Redialling the last dialled number

Press and hold  to dial the last number.


For some phones, pressing and holding  opens the call log list. You can then press  to scroll through the list, and then press and hold  to dial the selected number.

Dialling a number by voice


Press  to dial a number by voice, and say a name into the microphone.

- ! This is available only when your phone supports the voice recognition function and your phone and the headset are connected by the Hands-free profile.


Answering a call


Press  when the phone rings.

Ending a call

Press  when you have finished the conversation.

Rejecting a call


Press and hold  as a call comes in.

 This is available only when your headset and the phone are connected by the Hands-free Bluetooth profile, and the phone supports the incoming call rejecting function.



Using options during a call

You can use the following functions to control your call while a call is in progress.


Adjusting the volume

Press  to adjust the earpiece volume while talking.


Muting the microphone


Press and hold  to turn off the microphone so that the person with whom you are speaking cannot hear you. Press and hold  again to turn back on the microphone.

Placing a call on hold


Press and hold  to place the current call on hold.

Answering a second call

Press and hold  to answer a second call when you hear a call waiting tone. The first call places on hold.

To reject a second call, press .

Switching between two calls

Press and hold  to switch between an active call and one on hold.


Switching a call from the phone to the headset

Press  to switch the call from the phone to the headset.


Using music control functions

Settings to play music files may differ depending on your Bluetooth phone. Please make sure that you create the proper settings for music playbacks on your phone by following the phone's user guide.



Listening to music

Press . The music player launches and sound output switches to the headset.


For some phones, the phone may ask you if you want to listen to music via the headset. Confirm the message by selecting **Yes** or **OK**.

 Depending on the types of your Bluetooth phone, it may read MP3 files only. Make sure that you have the right file format (*.mp3) for your music files.



Pausing and resuming music

- 1 Press  to pause playback.
- 2 Press  to resume playback.

Stopping music

Press and hold .

Listening to the previous/next track

Press  to move to the previous track or press  to move to the next track.

Rewinding/Fast forwarding

Press and hold  while music is on.




Adjusting the volume

Press  to increase or decrease the volume level.



Answering a call while listening to music

When a call comes in while music is playing, your headset will alert you so that you can answer the call.

- 1 When the phone rings, press . The music stops and you are connected with the caller.
- 2 When you have finished a conversation, press .
- 3 Press  to begin playing music.

 
Some phones may automatically begin playback after a call.




- This is available only when your phone supports the Advanced Audio Distribution profile, A/V Remote Control profile, and Hands-free Bluetooth profile.
- You are not able to make a call while music is playing.

Care and maintenance

Storing the headset

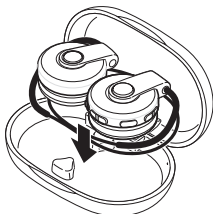

-  Be careful not to get your finger caught in the case when you close it.
- Be careful not to damage the headset, by applying excessive force while placing it in its case.
- Always store the headset with the power off.
- Avoid storage at high temperatures (above 60° C / 134° F), such as in a hot vehicle or in direct sunlight. Storage at high temperatures can impair performance and reduce battery life.
- Do not expose the headset or any of its supplied parts to rain or other liquids.



Frequently asked questions

How far away from my phone will my headset work?	The operating range is typically up to 30 feet (10 metres)
Will my headset work with my cordless phone at home?	Samsung SBH170 is not designed for use with cordless phones.
Will my headset work with laptops, PCs, and PDAs?	Samsung SBH170 will work with devices that are compliant with Bluetooth version 1.2 and support Advanced Audio Distribution profile, A/V Remote Control profile, Headset profile and/or Hands-free profile(s).
Will anything cause interference with my conversation when I'm using my headset?	Appliances such as cordless phones and wireless networking equipment may cause interference with your conversation, usually adding a crackling noise. To reduce any interference, keep the headset away from other devices that use or produce radio waves.
Will my headset interfere with my car's electronics, radio, or computer?	Samsung SBH170 produces significantly less power than a typical mobile phone. It also only emits signals that are in compliance with the international Bluetooth standard. Therefore, you should not expect any interference with standard consumer-grade electronics equipment.

Can other Bluetooth phone users hear my conversation?	When you pair your headset to your Bluetooth phone, you are creating a private link between only these two Bluetooth devices. The wireless Bluetooth technology used in your headset is not easily monitored by third parties because Bluetooth wireless signals are significantly lower in radio frequency power than those produced by a typical mobile phone.
Can I use the headset while charging?	The headset is not able to operate while charging.
Making/receiving a call does not work well and the call ends often while talking.	The electric wave is in unsteady condition. Please move to another area and try again.
Battery operation time doesn't match the one stated in the user's guide.	<ul style="list-style-type: none">• The battery will gradually wear out because it is a consumable part.• If you place the battery in extreme heat or cold, the operation time is shortened.
The sound is echoing while talking.	Adjust the speaker volume, or move to another area and try again.
Music files are not activated!	According to the types of your phone, it may not read other file formats, such as *.wav, *.wma and *.avi other than MP3 files. Make sure that you have the right file format (*.mp3) for your music files.
How do I take care of my headset?	To clean the headset, use a clean, soft cloth that is slightly damp.



Warranty and parts replacement

Samsung warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase.

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased or qualified service center. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty.

- The warranty is limited to the original purchaser
- A copy of your receipt or other proof of purchase is required for a proper warranty service
- The warranty is void if the serial number, date code label or product label is removed, or if the product has been subject to physical abuse, improper installation, modification, or repair by unauthorised third parties
- The responsibility of Samsung products shall be limited to the repair or replacement of the product at its sole discretion
- Specifically exempt from any warranty are limited-life consumable components such as batteries and other accessories
- Samsung is not liable to any incidental or consequential damages arising from the use or misuse of any Samsung product
- This warranty gives you specific rights and you may have other rights which vary from area to area
- Unless instructed in the User Guide, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the unit, whether in or out of warranty. It must be returned to the purchase point, factory or authorised service agency for all such work

- Samsung will not assume any responsibility for any loss or damage incurred in shipping. All repair work on Samsung products by unauthorised third parties voids any warranty



Correct disposal of this product



(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.



Glossary

- 1 Bluetooth** is a radio technology developed to connect devices, such as mobile phones and headsets, without wires or cords over a short distance of approximately 10 metres. More information is available at www.bluetooth.com

- 2 **Bluetooth profiles** are protocols through which Bluetooth devices communicate with other devices. Bluetooth phones support different sets of profiles - most support the headset profile but some support the hands-free profile and others support both profiles. In order to support a certain profile, a phone manufacturer has to implement certain mandatory features within the phone's software.
- 3 **Pairing** creates a unique and encrypted communication link between two Bluetooth-enabled devices and allows them to communicate with each other. Bluetooth devices will not work if the devices have not been paired with each other.
- 4 **Passkey or PIN** is a secret code that needs to be entered on a phone in order to pair the phone with a Bluetooth headset. When you have already paired your phone with the headset, the phone and the headset will recognise each other and the phone will bypass the discovery and authentication process and automatically accept the transmission.
- 5 **Standby mode** is when the headset is passively waiting for a call. When you "end" the call on your mobile phone, the headset will go into Standby mode.
- 6 **Active mode** is when the headset has an active call in progress or music is being played.



Specifications

Bluetooth version	Version 1.2
Bluetooth profile support	Advanced audio distribution profile, A/V Remote control profile, Headset profile, Hands-free profile.
Frequency range	2.402 ~ 2.480 GHz
Power consumption for transmission	0.25 ~ 2.5 mW
Bluetooth-available distance	10 m
Dimensions	40 mm (D: diameter) x 24 mm (H)
Weight	57 g (or 56±1 g)
Operating temperature range	0 ~ 40° C
Typical standby time	Up to 160 hr
Typical talk time	Up to 8 hr
Typical play time	Up to 8 hr
Battery charging time	Up to 3 hr
Adapter input	AC 100 ~ 240 V, 50/60 Hz
Adapter output	DC 5 V, 700 mA

The battery's operation time may shorten, depending on the usage and charging status.

目錄

入門

取出產品	25
耳機相關概述	25
按鈕功能	26
將電池充電	28
佩戴耳機	29

使用耳機前

開啓 / 關閉耳機電源	30
將耳機配對相容的手機	30
將配對的耳機連接手機	31

使用耳機

使用通話功能	32
使用音樂控制功能	34
聽音樂時接聽來電	35

保養與維修

存放耳機	36
常見問題	37
憑證與安全認證	39
正確的產品廢棄方式	40
字彙說明	41
規格	42



感謝您

感謝您購買 Samsung 立體藍芽耳機 SBH170。希望您對本產品感到滿意。請詳讀本說明手冊，協助您開始使用本產品並妥善使用此耳機的功能。



行車安全

行車時使用手機，可能導致駕駛分心，而增加意外發生的可能性。

因此行車時若要使用手機，請長話短說，切勿記筆記或閱讀文件。接聽通話請量力而為。行車狀況需求時（如天候不佳、交通流量大、車內有孩童、行經塞車路口或駕車出現困難時），請先將車輛暫停路邊再接聽電話。

行車時請切記，安全第一！

並請遵守您所在地的法律規定。



檢查手機相容性

SBH170 相容符合藍芽¹（參閱字彙說明）版本 1.1 或更新版本，且支援 Advanced Audio Distribution profile（進階音源分配模式）、Audio Video Remote Control profile（音源視訊遙控模式）、Headset profile（耳機模式）及 Hands-free profile²（免持聽筒模式）的大多數藍芽手機。若要確定您的手機是否具有藍芽功能，請至手機廠商的網站查詢。

入門

本節說明藍芽耳機的正確使用方式。

 


取出產品

確定妳有立體聲耳機，攜帶盒，轉接器及使用指南這些物品。



耳機相關概述

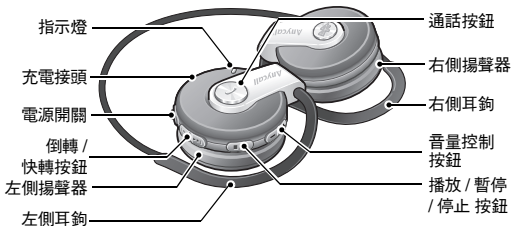

您立體聲耳機隨附的物品與可向三星經銷商購買的配件，視您所在的國家或服務供應商而有所不同。



按鈕功能

☎ 通話按鈕

待機模式中

- 按一下以啟動聲控撥號。

當以免持聽筒藍芽模式連接耳機和手機，且手機支援此功能時，您才能使用此功能。

- 按住可重撥上一個撥出的號碼。

在部分手機上，按住此按鈕可開啓通話記錄清單。再次按住才可重撥上一個撥出的號碼。

有來電時

- 按下以接聽電話。
- 按住以拒絕接聽電話。

通話中

- 按住可保留來電，或接聽保留的來電。
- 按住以接聽第二通來電。
- 按住可交替接聽通話中的來電，也可保留來電。
- 按一下以結束通話。

在可連接模式中

- 若耳機和手機已透過耳機或免持聽筒模式進行配對，按一下便可將耳機連接手機。

播放 / 暫停 / 停止按鈕

待機模式中

- 按一下以啟動音樂播放器。


啟動音樂播放器時

- 按一下以開始音樂播放。
- 按一下以暫停或繼續音樂播放。
- 按住以停止播放。
- 再按一次以重頭播放曲目。

在可連接模式中

- 若耳機和手機已透過 A/V Remote Control profile (音源視訊遙控模式) 進行配對，按一下便可將耳機連接手機。

音量控制按鈕

- 按一下以調整播放時的揚聲器音量。
- 按一下以調整通話時的耳機音量。
- 按住  來存取通話記錄時，按一下音量控制鈕可捲動通話記錄。

倒轉 / 快轉按鈕

- 在音樂播放時，按一下以移至上一個或下一個曲目。
- 在音樂播放時，按住可倒轉或快轉。



將電池充電

本耳機內建可重覆充電的電池，您無法取出電池。第一次使用耳機前請務必將電池充滿電。



- 1 將充電器插入耳機的充電接頭。
- 2 將充電器插入電源插座。

紅色指示燈亮起。電池完全充電時，指示燈會變為藍色。

- ❗ 充電完畢後，中斷充電器與電源或耳機間的連線。
- 您只能使用經 Samsung 核准的充電器。
未經授權的充電器可能導致爆炸意外或使耳機受損。
- 請將耳機存放於室溫中 (0 ~ +40°C)。
- 由於電池為耗材，在重覆充電 / 放電後，電池的電力將逐漸耗損。
- 充電時您無法操作耳機。充電完畢後，請再次嘗試連線。

關於充電

 
電池充電與標準操作時間

	充電時間	標準操作時間		
電池操作時間	可達 3 小時	通話時間	待機時間	播放時間
		可達 8 小時	可達 160 小時	可達 8 小時

當電池電量不足時

會發出警告嗶聲，並閃爍紅色指示燈。若您正通話中，請於耳機電源自動關閉前，將通話從耳機切換至手機。

佩戴耳機

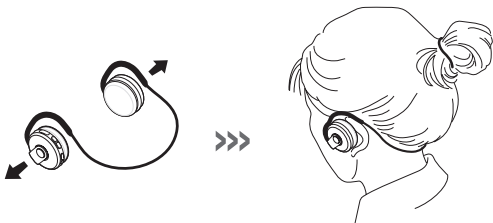

 
- 1 手持耳機，如圖示，並將耳機戴在耳朵上。請確定將耳機正確（左 [L]、右 [R]）佩戴在耳朵上。
- 2 握住耳機主體，將耳機調整至耳朵後側最舒適吻合的位置。

使用耳機前

本節說明藍芽耳機的基本操作與設定。



開啟 / 關閉耳機電源

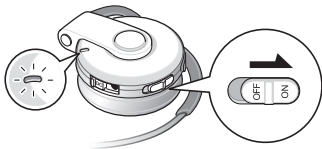


- 壓下耳機的開 / 關 ，來開啓耳機電源。
準備好配對耳機時，會亮起藍色指示燈。
- 壓下耳機的開 / 關 來關閉耳機電源。



將耳機配對相容的手機

Pairing³ (配對作業) 將會在兩個藍芽啓用裝置 (例如您的藍芽手機和藍芽耳機) 間建立唯一且加密的無線連結。若要將耳機搭配其他藍芽裝置使用，您必須先讓兩個裝置進行配對。進行配對時，請將耳機與手機保持緊密距離。


- 1 準備配對耳機。
準備配對的情況有 2 種：
 - 第一次啟動耳機時。

- 按住  來啟動耳機時。指示燈依序閃爍藍色、紅色、紫色各兩次後，就會變為藍色。
- 2 根據手機的使用指南，搜尋手機上的耳機 您的手機將找到「Samsung SBH170」。
- 3 選擇 **Samsung SBH170**。
- 4 手機將詢問是否想與本耳機配對，請選擇**是**或**確定**確認。
- 5 在耳機識別碼或 PIN 碼輸入⁴，「0000 (4 個零)」。



將配對的耳機連接手機

若因斷電導致兩個藍芽裝置之間的連線中斷，您必須重新連接這兩個裝置。重新連接配對的耳機時，您不會被要求輸入識別碼。

- 1 請確定耳機電源為開啓。
依照手機類型完成配對時，耳機可能自動重新連接至您的手機。
- 2 選擇想要的連線方式。
 - 若要從手機進行連接，請依照手機的使用指南操作。
 - 若要從耳機連線，您的手機和耳機必須進行一次以上的連線。按一下 .
- 3 成功連接兩個裝置後，便可在耳機上撥打或接聽電話。

使用耳機

本節說明如何使用各種功能，如撥打或接聽電話、在通話時使用可用的選單、聽音樂等。


- ❗ 啓用的功能可能依手機類型而有所不同。開始使用前，請確定您的手機支援本耳機提供的所有功能。

 




使用通話功能

 
撥打電話

重撥最後一組號碼

按住  以重撥最後一組號碼。

在部分手機上，按住  可開啓通話記錄清單。接著您可以按一下  來捲動清單，再按住  撥出所選的號碼。

聲控撥號

 
按一下  用語音撥號，對著麥克風說出姓名。

- ❗ 若您的手機支援語音辨識撥號功能，且手機與耳機是以免持聽筒模式進行連接，這時才能使用本功能。


接聽來電

手機鈴聲響起時，按一下 。

結束通話

結束通話時，按一下 。

拒接來電


有人來電時，按住  可拒接來電。

! 若您的耳機和手機是以免持聽筒藍芽模式進行連接，且手機支援來電拒接功能，這時才可使用本功能。



在通話中使用選項

在通話中，您可使用以下功能控制通話。

 
調整音量

按一下  調整耳機在通話時的音量。


麥克風靜音


按住  將麥克風關閉，使通話對方無法聽到您的聲音。再次按住  取消麥克風靜音。

保留來電


按住  保留目前的通話。

接聽第二通來電


當您聽到待接通話時，按住  來接聽第二通來電。保留第一通電話。

若要拒接第二通來電，請按 .

交替接聽兩通電話

按住  來交替接聽通話中及被保留的電話。

將通話從手機切換至耳機

按一下  以將通話從手機切換至耳機。



使用音樂控制功能

播放音樂檔案的設定，可能依藍芽手機的不同而有所差異。請確定依照手機的使用指南，在您的手機上建立合適的音樂播放設定。

聆聽音樂

按一下 。啟動音樂播放器，並將聲音輸出切換至耳機。

在部分手機上，可能會詢問您是否想要用耳機聽音樂。選擇**是**或**確定**來確認訊息。

! 某些類型的藍芽手機，可能只能讀取 MP3 檔案。因此請確定您音樂檔案的格式正確 (*.mp3)。

暫停或繼續播放音樂

1 按 暫停播放音樂。

2 按 繼續播放音樂。

停止音樂

請按住 。

聆聽上一首 / 下一首曲目

按一下 移至上一首曲目，或按一下 移至下一首曲目。

倒帶 / 快轉


在音樂播放時按住 。

調整音量

按一下  來增加或減少音量大小。

聽音樂時接聽來電

播放音樂時若有來電，您的耳機將警示您，讓您接聽電話。

- 1 電話鈴聲響起時，按一下 。音樂停止，並將您連接來電者。
- 2 結束通話時，按一下 。
- 3 按一下  以開始播放音樂。

 
有些手機可能於通話結束後，自動開始播放音樂。

- ❗ 若您的手機支援 Advanced Audio Distribution profile (進階音源分配模式)、A/V Remote Control profile (音源視訊遙控模式) 及 Hands-free Bluetooth profile (免持聽筒藍芽模式)，您才能使用本功能。
- 音樂播放時，您無法撥打電話。

保養與維修



存放耳機

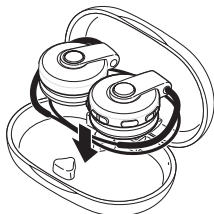

- 當您關上盒蓋時請小心手指別被夾到。
- 將耳機置入盒內時請勿過於用力，以免損壞耳機。
- 存放耳機時請永遠將耳機電源關閉。
- 避免將耳機存放在溫度高 (60°C / 134°F 以上) 的地方，例如高溫車內或日光直射處。(耳機存放在高溫處可能會損壞其效能，並降低電池的使用壽命)。
- 請勿讓耳機或任何隨附的零件淋雨或接觸其他液體。



常見問題

請問耳機距離手機的有效範圍為何？	耳機距離手機的有效操作範圍可達 30 英尺 (10 公尺)。
家中的無線電話是否也可搭配本耳機使用？	Samsung SBH170 無法用於一般的無線電話。
筆記型電腦、電腦和 PDA 是否皆可搭配本耳機使用？	Samsung SBH170 可用於與藍芽版本 1.2 相容的裝置，以及支援 Advanced Audio Distribution profile (進階音源分配模式)、A/V Remote Control profile (音源視訊遙控模式)、Headset profile (耳機模式) 和 / 或 Hands-free profile (免持聽筒模式) 的裝置。
使用本耳機時，哪些設備會干擾通話？	像無線電話或無線網路設備等裝置，都可能使通話中出現爆裂聲，而對通話造成干擾。如要降低干擾，請將耳機遠離使用或會產生電波的裝置。
本耳機是否會干擾車上的電子設備、收音機或電腦？	Samsung SBH170 所產生的功率比一般手機要小得多。不過，耳機發射的信號符合國際藍芽標準規範。因此，標準家用電子設備並不會受到任何干擾。
其他的藍芽手機使用者，是否會聽到我的通話內容？	將耳機配對藍芽手機使用時，在這兩個藍芽裝置之間會形成一個私人的無線溝通管道。由於藍芽無線信號的射頻功率，比一般手機的射頻功率要小得多，因此本產品使用的無線藍芽技術，不易遭第三者監聽。
充電時是否也能使用耳機？	充電時您無法操作耳機。

無法撥出／接聽電話，經常在通話時掛斷。	電波狀況不穩定。請移至其他區域並再試一次。
電池操作時間與使用指南中的所述不符。	<ul style="list-style-type: none"> • 由於電池為耗材，因此其效能將持續耗損。 • 若將電池放在過熱或過冷的地方，其操作時間將縮短。
通話時，說話的聲音有迴音。	調整揚聲器音量，或移至其他區域再試一次。
無法啟動音樂檔案！	有些類型的手機，可能無法讀取 MP3 檔案以外的檔案格式，如 *.wav、*.wma 和 *.avi。因此請確定您音樂檔案的格式正確 (*.mp3)。
我該如何保養耳機？	如要清理耳機，請使用乾淨、柔軟且微濕的布。



憑證與安全認證

自原購買日期起一年內，Samsung 對此產品提供保固，使產品之素材、設計與工藝上皆無瑕疵。

在保固期間，此產品若於正常使用與服務下證明有缺陷，您應將產品退回原本出售之經銷商或合格的服務中心。Samsung 和指定維修公司的責任，僅限於保固中的維修成本與 / 或元件更換。

- 限原消費者才能享有保固。
- 若要享有適當的保固服務，您必須提供收據或其他購買證明。
- 若產品序號、日期碼標籤或產品標籤遭移除，或若產品曾遭未經授權的協力廠商加以濫用、不適當安裝、修改或維修，則本公司無責任提供保固。
- Samsung 產品的責任，只在於有權維修或更換產品。
- 有使用期限的耗材，如電池和其他配件，皆不在保固範圍
- 對任何 Samsung 產品的使用或濫用，所造成任何意外或附帶損失，Samsung 恕不負責。
- 本保固賦予您特定權利，依您所在地區不同，您可能擁有其他權利。
- 除非《使用指南》中明確規定，否則不論保固期內或超過保固期後，在任何情況下，使用者均不得試圖維修、調整或修理裝置。如有需要，請將產品退回購買地點、原廠或經授權的服務機構，代以維修、調整或修理裝置。
- Samsung 對於產品運送過程所造成的損失或損毀，不負任何損害賠償責任。對於由未經授權的協力廠商，對 Samsung 產品所進行的任何維修工作，本公司不提供保固。



正確的產品廢棄方式



(廢棄的電器與電子設備)

在產品或其印刷品上出現的這個標記，代表當產品不堪使用之時，不得將產品與其他家庭廢棄物一同丟棄。為避免未妥善控制廢棄物而損害環境或傷害人體健康，請將此產品與其他類型廢棄物加以區分，並妥善回收，以促進資源回收再利用。

關於環保安全回收此物品的地點與方法，家庭使用者應聯絡產品經銷商或地方政府機構。

企業使用者應洽供應商，並確認購買合約的條款與條件。請勿將本產品與其他商用廢棄物混合一起丟棄。



字彙說明

- 1 **藍芽**是一種無線電科技，它可讓您在約 10 公尺的短距離內，不需使用電纜線或電線就可連接手機和耳機等各裝置。詳細資訊請上網 www.bluetooth.com。
- 2 **藍芽模式**為一種通訊協定。透過藍芽模式，藍芽裝置便可與其他裝置進行通訊。藍芽手機支援不同的模式組 - 大多支援耳機模式，但有些支援免持聽筒模式，其他則同時支援耳機和免持聽筒模式。為支援特定模式，手機製造商必須在手機軟體內執行特定的強制功能。
- 3 **配對**，可在兩個啓用藍芽的裝置間，建立特殊與加密的通訊連結，讓這兩個裝置彼此進行通訊。但若這各裝置之間沒有進行配對，便無法使用藍芽裝置。
- 4 **識別碼或 PIN 碼**是必須輸入手機的秘密編碼，輸入後才能將手機與藍芽耳機配對。將耳機與手機進行配對後，手機和耳機就能識別彼此，且手機將迴避發現與認證程序，並自動接受傳輸。
- 5 當耳機被動等待來電時，就是**待機模式**。「終止」手機通話時，耳機將進入 [待機] 模式。
- 6 當耳機正在通話中或音樂播放中，這就是**啟動模式**。



規格

藍芽版本	版本 1.2
Bluetooth profile (藍芽模式) 支援	Advanced audio distribution profile (進階音源分配模式)、A/V Remote control profile (音源視訊遙控模式)、Headset profile (耳機模式)、Hands-free profile (免持聽筒模式)。
頻率範圍	2.402 ~ 2.480 GHz
傳輸耗電量	0.25 ~ 2.5 mW
藍芽有效距離	10 公尺
範圍	40 公釐 (D : 範圍) X 24 公厘 (高)
重量	57 公克 (或 56±1 公克)
操作溫度範圍	0 ~ 40°C
一般待機時間	可達 160 小時
一般通話時間	可達 8 小時
一般播放時間	可達 8 小時
電池充電時間	可達 3 小時
旅行充電器輸入	AC 100 ~ 240 V、50/60 Hz
旅行充電器輸出	DC 5 V. 700 mA

電池操作時間可能依使用和充電狀態而有所縮減。